



Hardware RAID Installation and Configuration in Server ST550


1. Power ON the Server and Press F1 to start the RAID configuration.

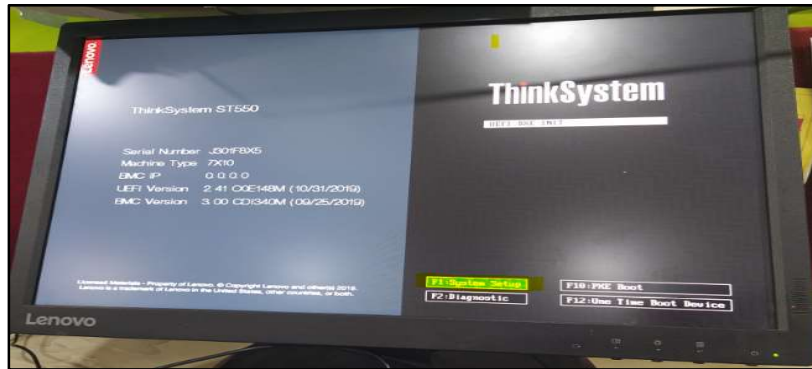


2. Click on the **UEFI Setup** option.

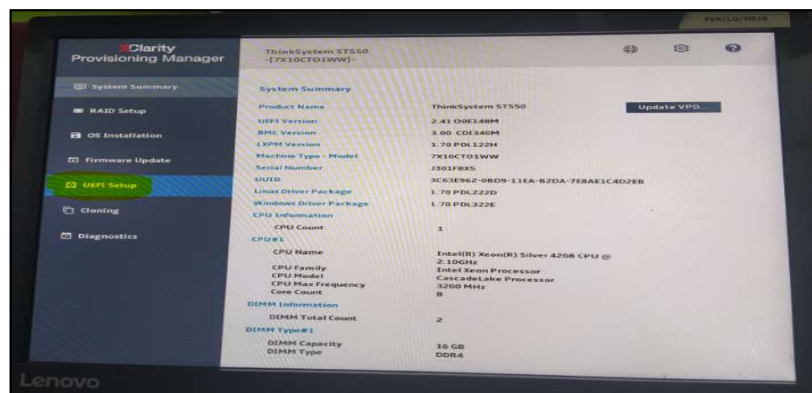


3. Click on the **System Settings** and then Click on the **Storages** option, as marked in Yellow.

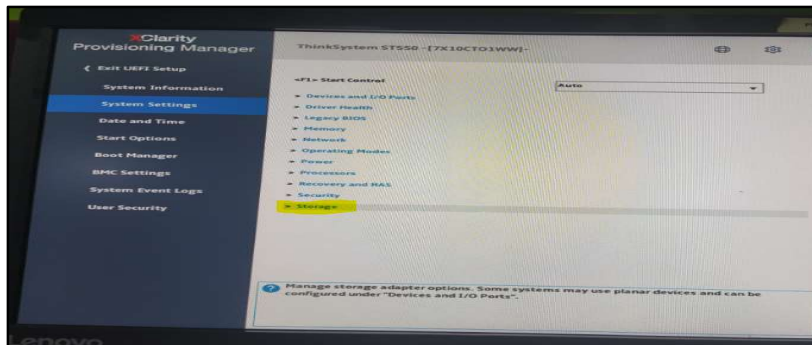


4. Click on the **RAID CARD Configuration Utility**.

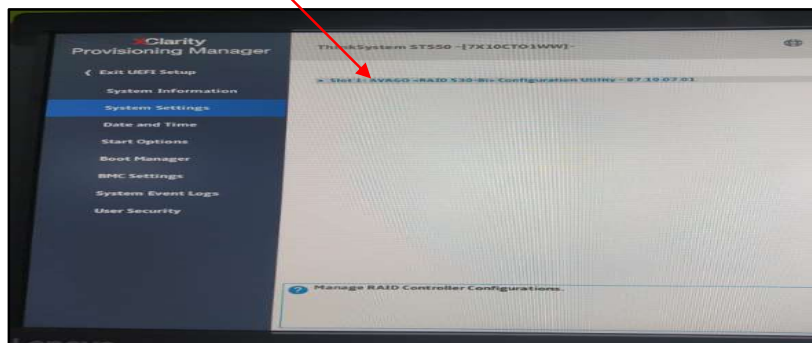


5. Click on **Configure** option as marked in Yellow Colour in the below image.

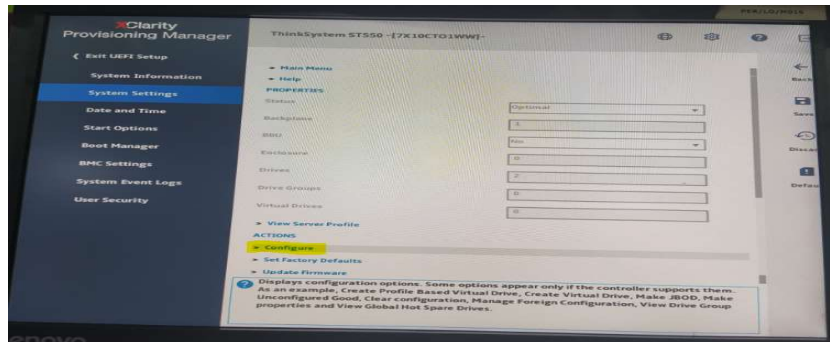


6. Click on **Create Virtual Drive**

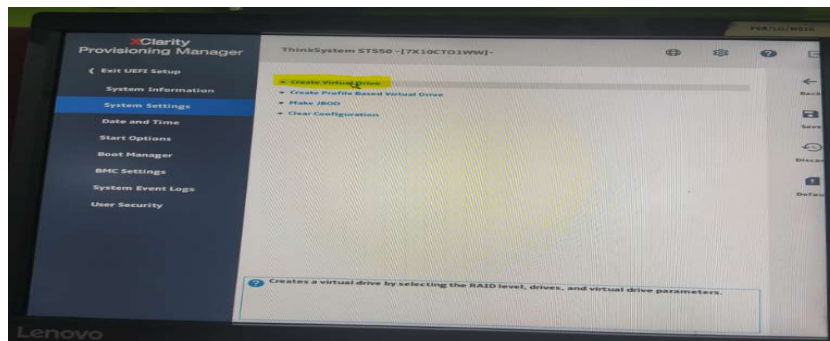


7. Fill the below details as marked in Yellow Colour and then Click on **Select Drives**

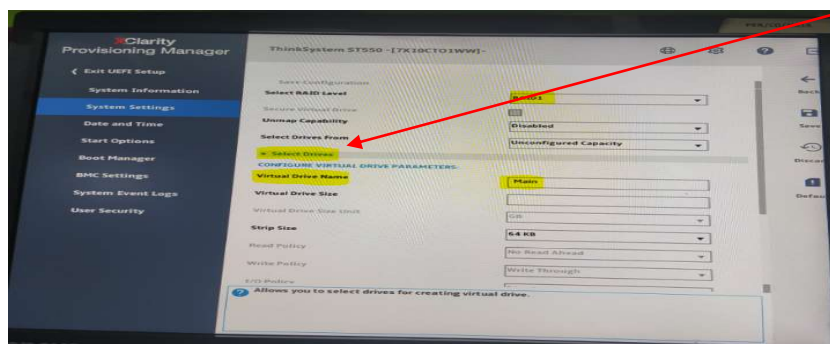


8. After click on **Select Drives**, select both the **Hard Disk Option** as marked in yellow colour and then Click on **Apply Changes**

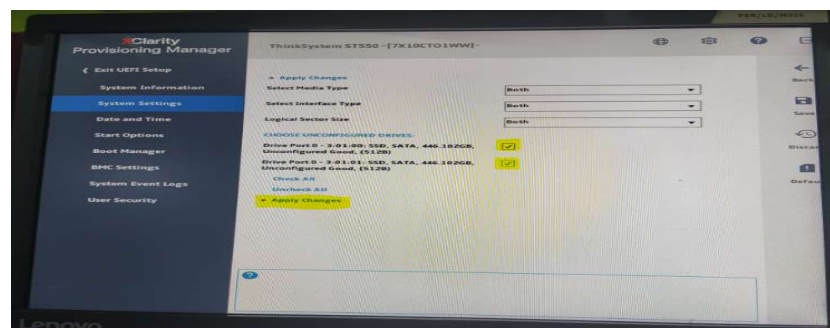

9. Click on **Save Configuration**

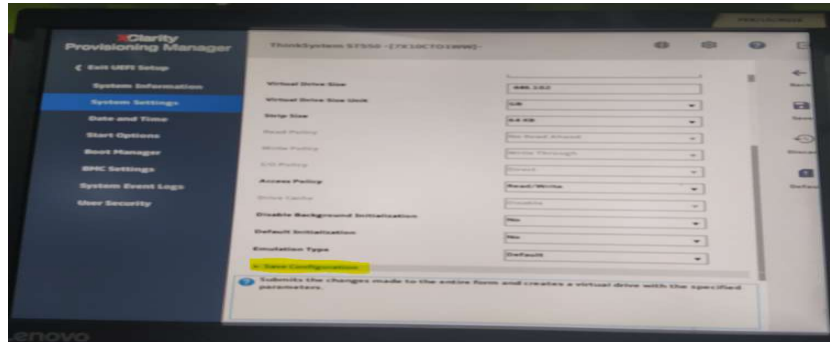

10. Click on Exit as shown in the below figure

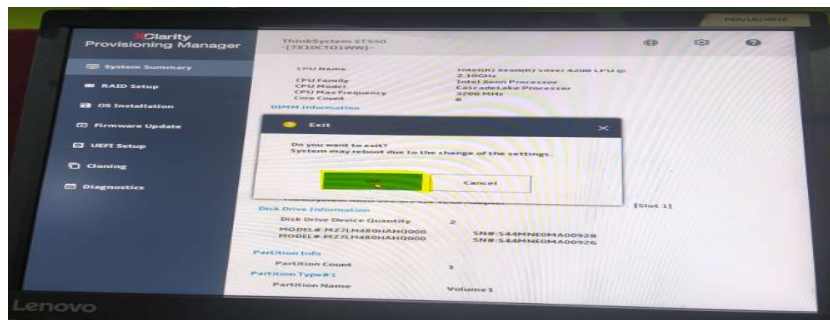


Window Server 2012 Installation in Server


1. Start the Server and Start Pressing **F12** button in the Keyboard.



2. Select the Drive where you have the installation file.

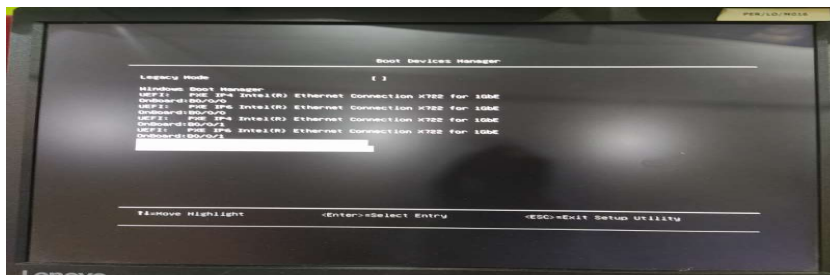


3. Select the Language and then Click on Next

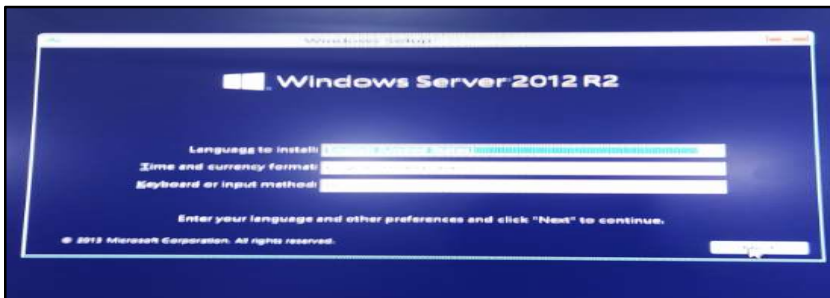


4. Click on **Install Now**




5. Enter the Windows Key and then Click on Next

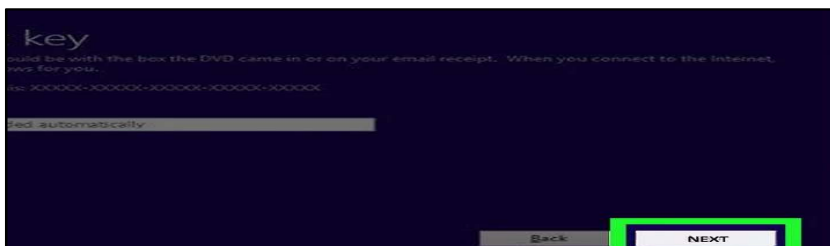


6. Click on the **GUI Option**

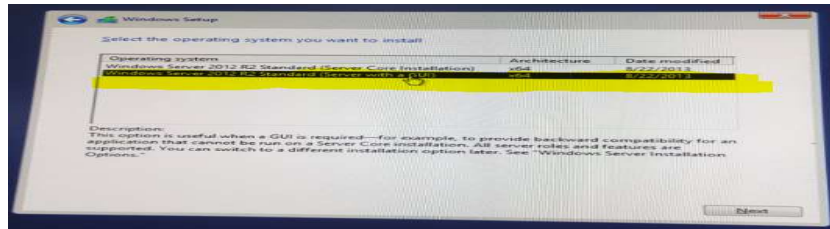


7. Click on **Custom** option

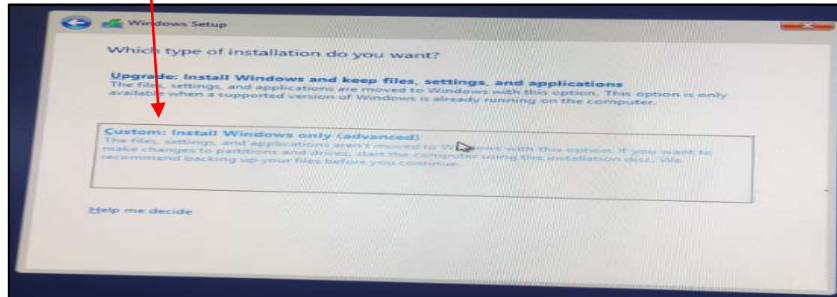


8. Click on the **Load Drivers**

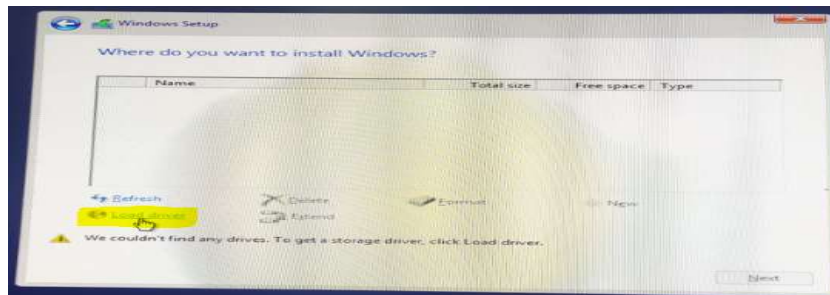


9. Click on the **Browse**

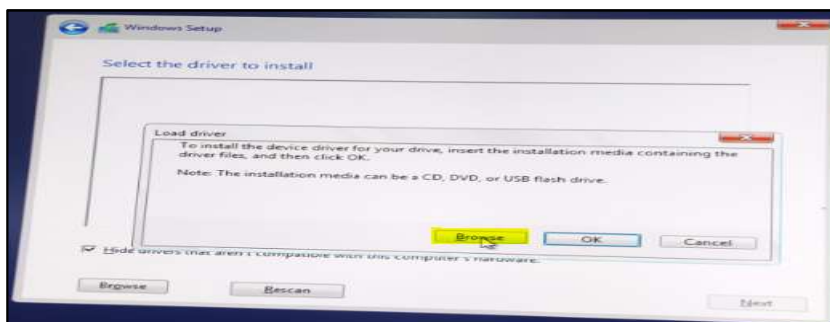



10. Select the Path where the driver was saved, Select the Path and Click on OK

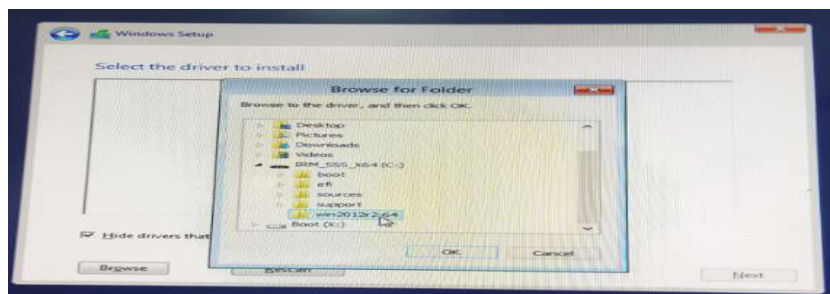

11. Click on the Driver and then Click on Next

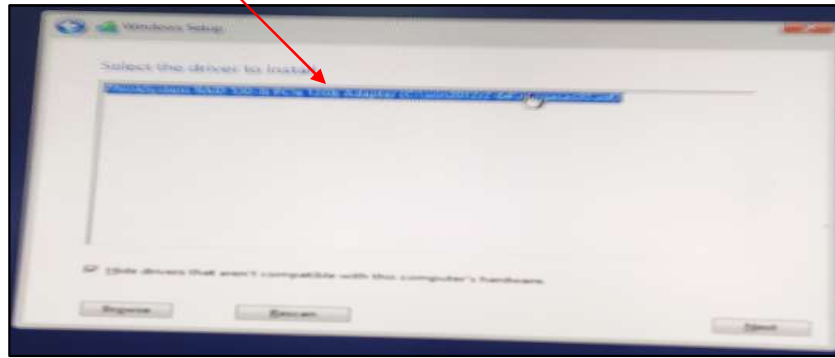

12. Keep only one drive (**Drive 1 Unallocated Space**) and Delete rest other Drive and then Click Next

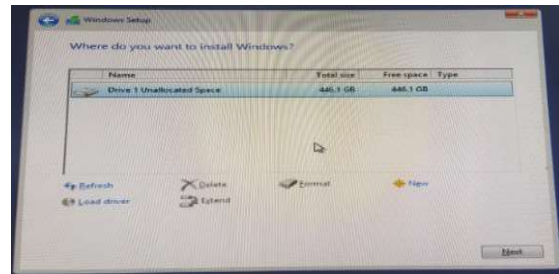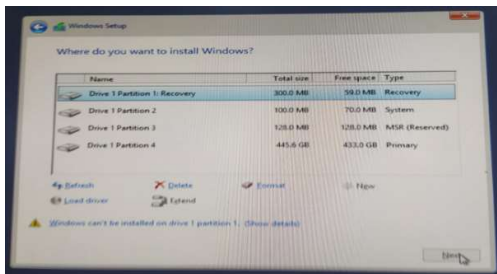

13. Wait for Windows to install. This process may take an hour

