



Knowledge Sharing

Hardware RAID Installation and Configuration in Server ST550


- Power ON the Server and Press F1 to start the RAID configuration.

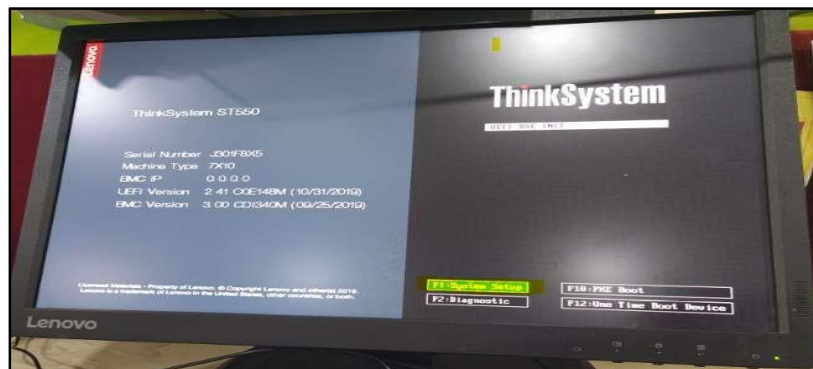


- Click on the **UEFI Setup** option.

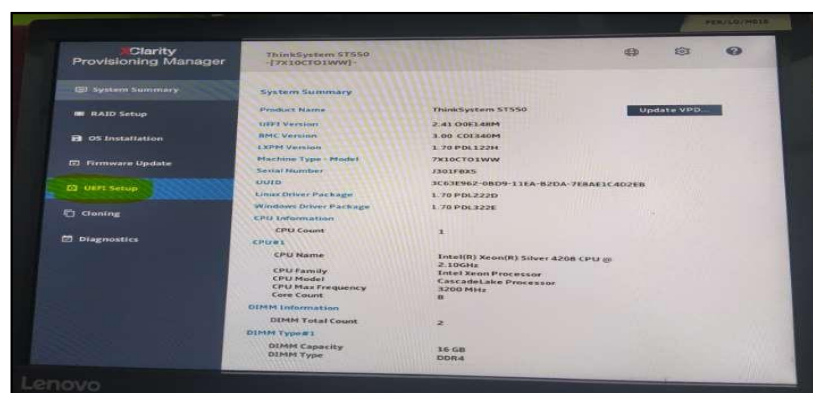

- Click on the **System Settings** and then Click on the **Storages** option, as marked in Yellow.

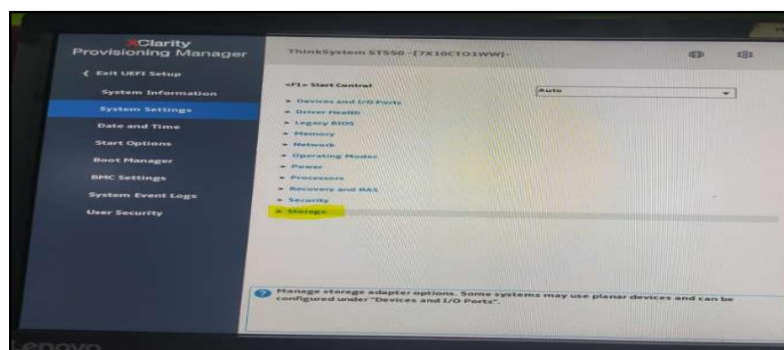


- Click on the **RAID CARD Configuration Utility**.

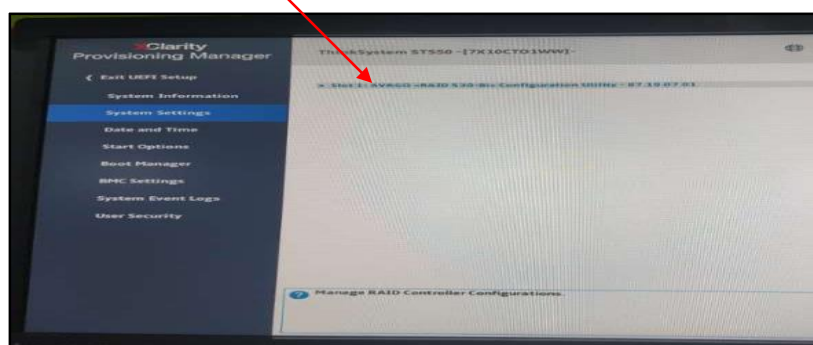


Knowledge Sharing


- Click on **Configure** option as marked in Yellow Colour in the below image.

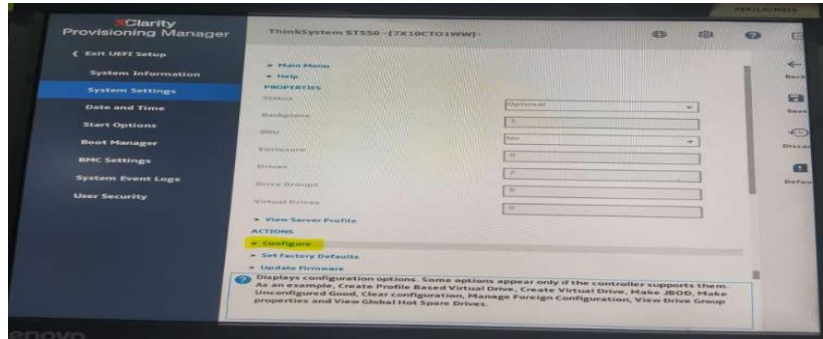


- Click on **Create Virtual Drive**

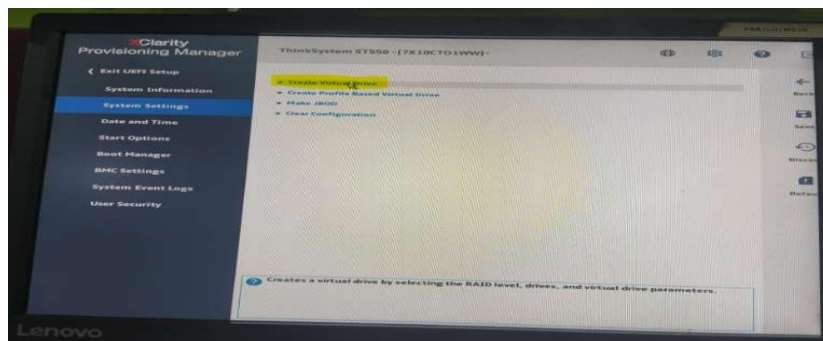

- Fill the below details as marked in Yellow Colour and then Click on **Select Drives**

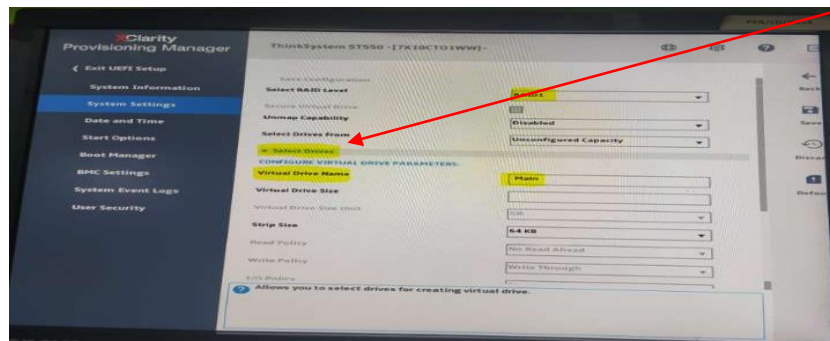


- After click on Select Drives, select both the **Hard Disk Option** as marked in yellow color and then Click on **Apply Changes**

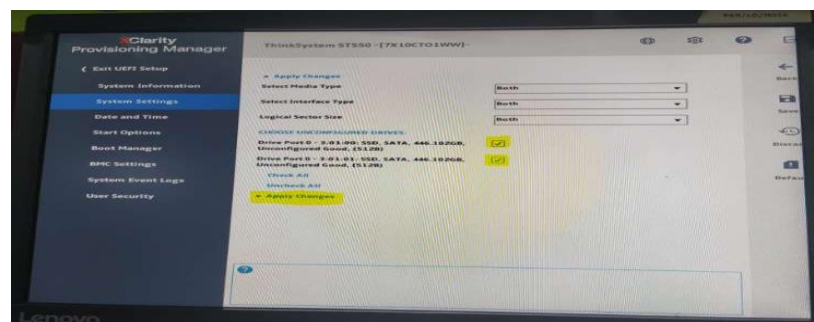


Knowledge Sharing

- Click on **Save Configuration**

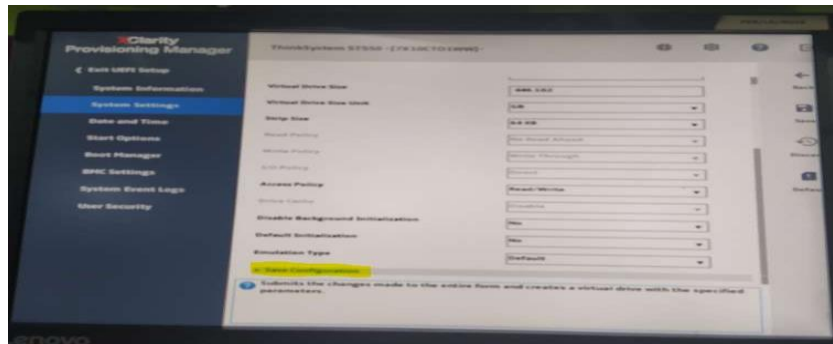


- Click on Exit as shown in the below figure

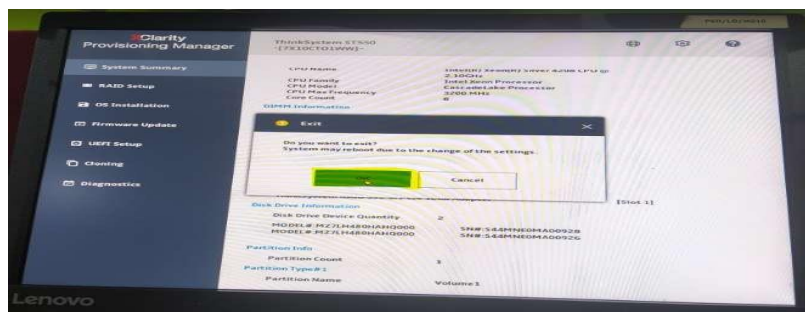


Knowledge Sharing

Window Server 2012 Installation in Server


- Start the Server and Start Pressing **F12** button in the Keyboard.

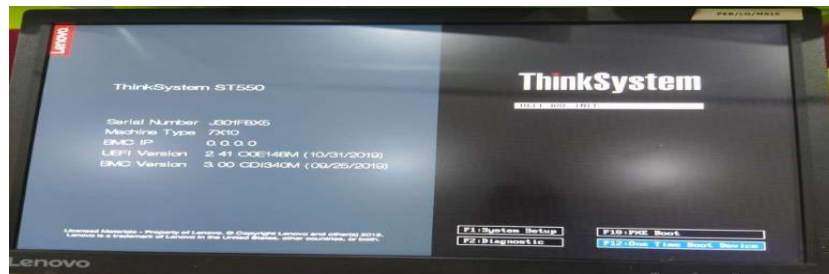

- Select the Drive where you have the installation file.

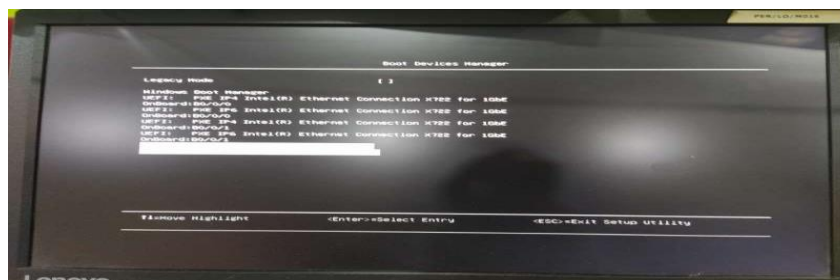

- Select the Language and then Click on Next

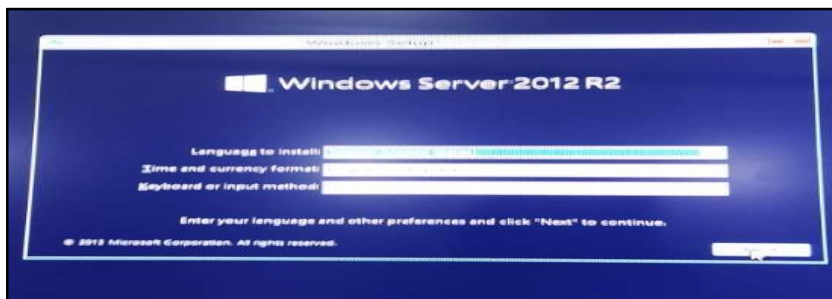


- Click on **Install Now**




- Enter the Windows Key and then Click on Next

Knowledge Sharing

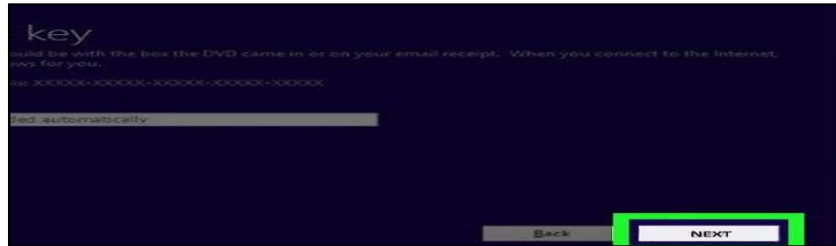


Knowledge Sharing


- Click on the **GUI Option**

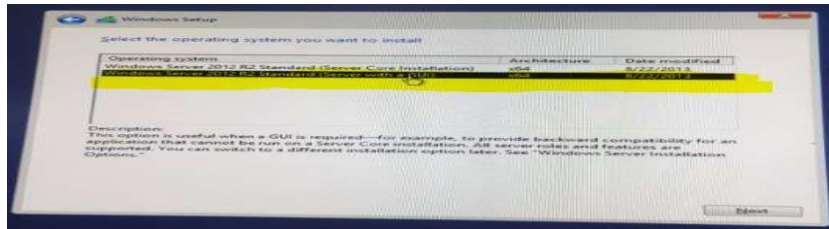


- Click on **Custom** option

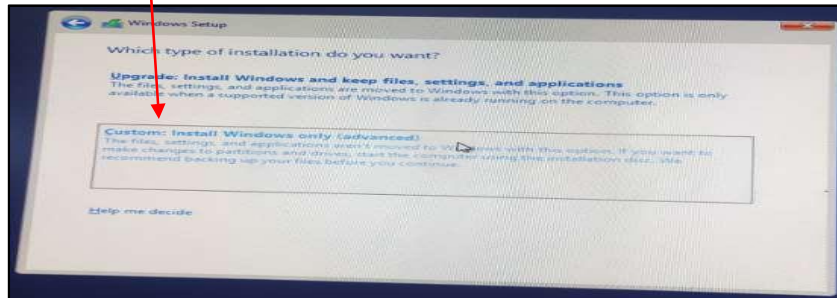

- Click on the **Load Drivers**

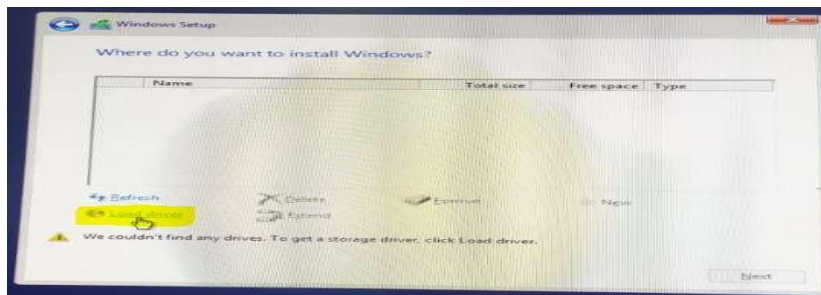


- Click on the **Browse**

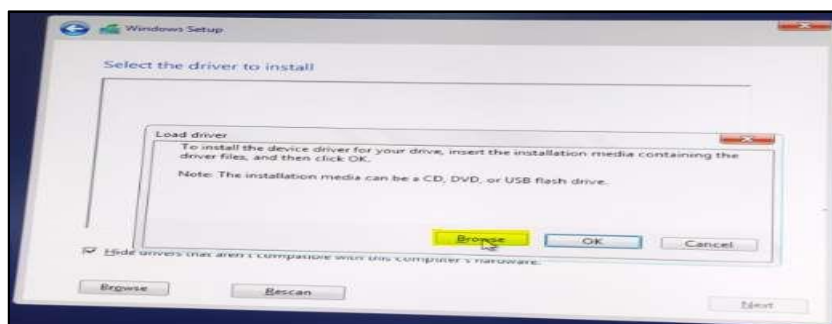


- Select the Path where the driver was saved, Select the Path and Click on OK

Knowledge Sharing


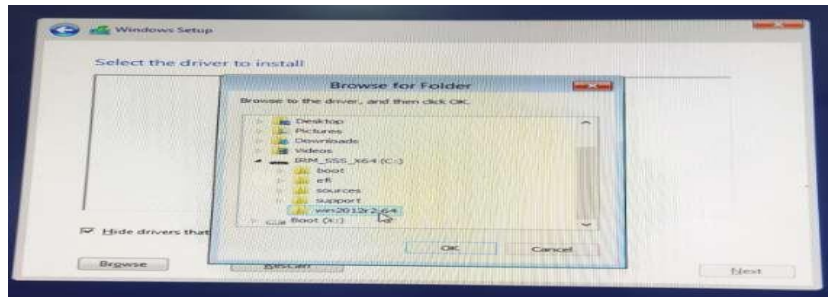


Knowledge Sharing

- Click on the Driver and then Click on Next

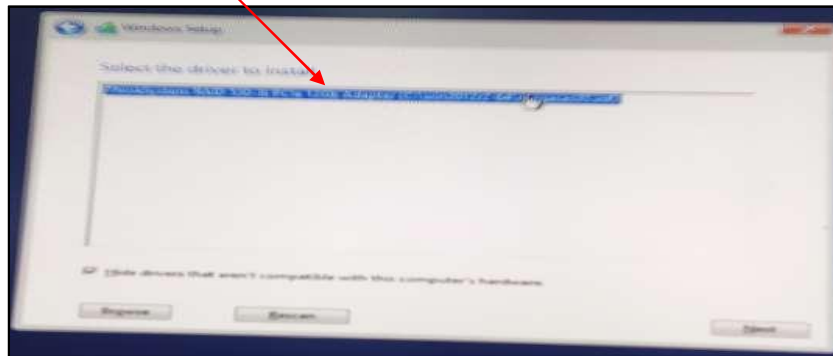

- Keep only one drive (**Drive 1 Unallocated Space**) and Delete rest other Drive and then Click Next

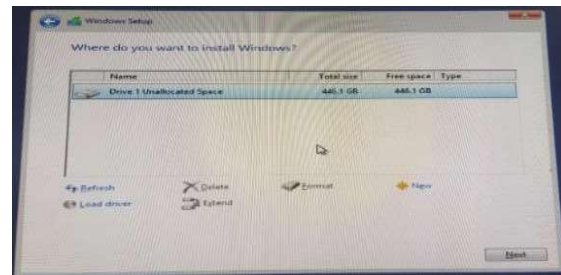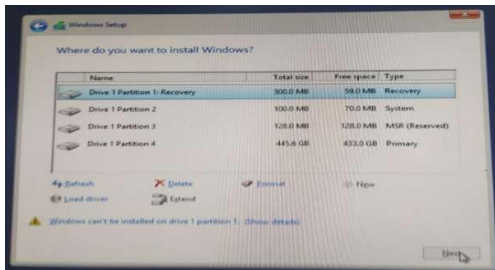

- Wait for Windows to install. This process may take an hour

